


CI Plus IS Compatible with Existing Heat-fab Products. Here's how:

The Vent Adapter allows Connecting from Saf-T Vent CI Plus to Saf-T Vent CI or Saf-T Vent EZ.

- If there is no gasket in the CI Plus female end, clean and apply sealant to the joint as described in the CI Plus installation and maintenance instructions (Pub # PI-CCINS). Remove and discard the joint locking strap that is on the CI Plus female end. This will be replaced with the CCA_ADSV adapter strap.

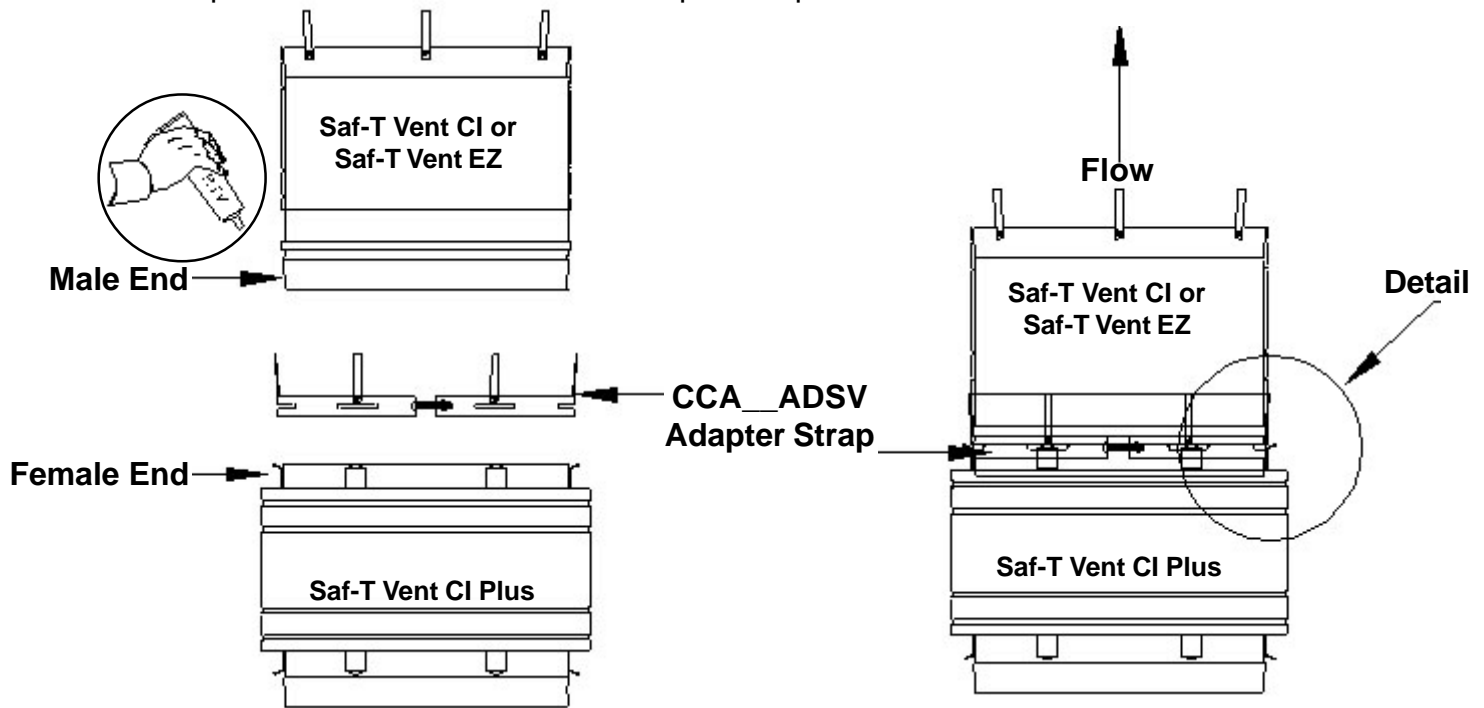

- Insert the male end of the Saf-T Vent CI / EZ Vent into the female end of the Saf-T Vent CI Plus. Install the joint adapter strap over the clips on the CI Plus vent female end with the tabs pointing upward. **Note:** Reposition the tabs to upright position before installation, if they were bent for packaging purposes. Tighten the nut on the strap so that it is secure. **CAUTION:** Over-tightening may cause damage to the joint. Slide the loose ring on the male end of the CI / EZ vent over the tabs on the adapter strap. Bend the tabs over the loose ring.

